



WALLBOARD OR PLASTER INSTALLATION

1. With metal or wood framing, install a framed opening at specified location. Open dimensions should be 3/4" larger than door size of panel; i.e., for a 12" x 12" panel, opening should be 12-3/4" x 12-3/4".
2. Frame above and below access panel. On panels larger than 16" x 16", install a double stud on both sides in the same manner as at passage panels.
3. Drill holes 3/8" or larger in the panel frame, 2 per side.
4. Place panel in position in opening and mark location of attachments on framing using holes in sides of panel frame as marking guide.
5. Remove panel and drill holes through studs at marked points.
6. Place panel in position and attach with appropriate sheet metal or machine screws.
7. Check panel for freedom of movement. If it binds, shim as necessary to remove any racking of frame at attachments to framing.

MASONRY INSTALLATION

1. Opening should be finished to dimensions 3/4" larger than door size of panel; i.e., for a 12" x 12" panel, opening should be 12-3/4" x 12-3/4".
2. Install according to following:
INSTALLING IN EXISTING WALL: If wall is already in place, drill holes 3/8" or larger in the panel frame, 2 per side. Position panel in opening provided and mark location of attachments on wall using holes as marking guides. Remove panel and install expansion shields in wall at marked points. Place panel in position (leaving masonry anchors flat against frame) and attach with appropriate sheet metal machine screws or equivalent.
INSTALLING IN NEW CONSTRUCTION: If wall is under construction at time panel is being installed, masonry anchors (unfolded from frame) will serve for attachment.
4. Check panel for freedom of movement. If it binds, shim as necessary to remove any racking of frame at attachments to masonry.



JL INDUSTRIES

9702 Newton Av S. Bloomington, MN 55431

© 2022 Activar Construction Products Group, Inc.



800-554-6077



sales@activarcpg.com



www.activarcpg.com

| Many Locations Nationwide

INSTALLATION INSTRUCTIONS: SP AND HSP ACCESS PANELS

Due to the wide variety of wall assemblies, these drawings are representative of a typical installation scenario, but are not meant to be a guideline for wall construction. Please consult your local AHJ for current wall construction codes.

The information contained in this document is the sole property of Activar Construction Products Group, Inc. Any reproduction in part or as a whole without the written permission of Activar Construction Products Group, Inc. is prohibited.

REV A – APRIL 29, 2022

MAINTENANCE:

- Our Access Panels are designed to be maintenance free. However, it is recommended that the outer surface of the panel, and the hinge area, be kept clear from debris and dirt, to ensure correct operation of the hinged door.
- If latches, locks or hinges need to be lubricated, use a “3 in 1” type light oil, removing excess with a cloth.
- To clean painted surfaces, use a soft cloth and mild soap and water.
- To clean stainless steel, use a soft cloth and mild soap and water solution. After cleaning, thoroughly rinse with clear water to remove all traces of the solution and wipe dry to prevent water marks from forming. Stains which resist that treatment can usually be removed by polishing in the direction of the grain with a soft cloth and a non-abrasive stainless steel polish. Test in an unobtrusive location.