
## CAST-IN-PLACE REPLACEABLE TACTILE

## Installation Procedure


(WET-SET)

Be sure to read and understand <u>all</u> of these instructions <u>before</u> you begin.

A. The physical characteristics of the concrete shall be as specified in the contract documents while maintaining a slump range of 4-7 inches to permit the solid placement of the ADA Cast-In-Place Replaceable Tactile Unit (ADAREP) in the wet cement.

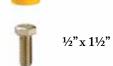


- The concrete shall be poured and finished level, true and smooth to the required dimensions prior to the placement of the ADAREP unit.
- C. Place the ADAREP unit 6-8 inches from the curb line. Working in a grid pattern, tamp the ADAREP unit into the wet concrete using a rubber mallet and a piece of wood. Continue this process until all of the air has been released, and the ADAREP unit surface is flush with the surrounding area. *IMPORTANT: Avoid striking the surface of the ADAREP unit directly.*

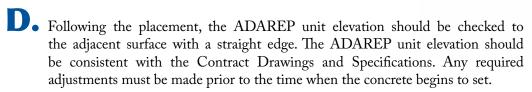





G • During and after the ADAREP unit installation, as well as the concrete curing stage, no walking or external forces can be placed on the ADAREP unit. The area must be protected from pedestrian traffic until concrete is cured. The ADAREP Warning Surface will be ready for pedestrian traffic within 2-4 hours.

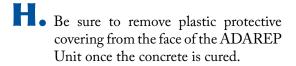



\*Not recommended or warrantied for asphalt installation.

Use an appropriate sized Tactile or Radius Tactile to fit the requirement. If cutting is required, contact manufacturer for more details.



Tensile Load Capacity: 6,200 P.S.I.



PRODUCT SIZES 2'x2' 2'x3' 2'x4' 2'x5' 3'x4' 3'x5'

APPLICATION
Fresh Pour
Concrete Ramps
& Replacement