

## **Installation Instructions**

## Homex<sup>®</sup> 300



## **Application Instructions**

## **General Requirements**

- Clear the area and set the form using Homex® 300 and wood or metal stakes. Be sure to drive below the top edge of the form.
- 2. Fill form with aggregate. Compress aggregate with a tamping tool, for a good foundation.

Note: consult your local building code to determine the necessary depth of concrete and aggregate.

3. Mix concrete to specification of manufacturer and pour into form. Using two pieces of Homex 300 fastened


together, screed poured concrete to the top of the Homex 300 form.

- 4. Use one piece of Homex as an expansion joint every ten lineal feet for sidewalks, to reduce surface cracking in the future.
- 5. Once the concrete has dried completely, remove or backfill with landscaping material.

Homex 300 conforms with the performance requirements of ASTM D 1751, U.S. Federal Spec. HH-F-341e Type 1, AASHTO Designation M213-65 with out bituminous additive and FAA Spec. P-610-2.7.




Clear the area and set form using Homex and wooden stakes. Be sure to drive stakes below top edge of form.

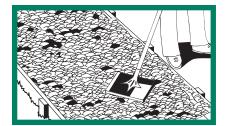


Fill with stone aggregate – compress aggregate with a tamping tool for a good foundation.


Note: Consult your local building Code to determine the necessary depth of concrete and aggregate.

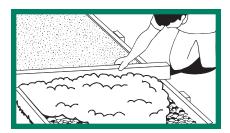

Mix concrete to specification of manufacturer and pour into form. Using two pieces of Homex fastened together, screed poured concrete to the top of the Homex form.

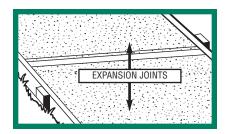

Use one piece of Homex as an expansion joint every ten lineal feet for sidewalks to reduce surface cracking in future.

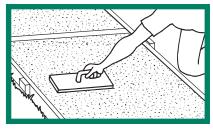

Trowel concrete smooth allowing liquid concrete to float to the top, then finish to your preferred texture.



Once the concrete has completely dried, fill and landscape for a professional finish.









To make sure you have the most current installation instructions visit http://www.Homasote.com/installation to see if newer instructions are online. If online is newer, print out and use the Internet version. These instructions were printed October 6, 2005.

homasote COMPANY, 932 Lower Ferry Road, West Trenton, New Jersey 08628, Phone: (800) 257-9491 www.homasote.com, For Technical Support call Ext. 1332 or e-mail techhelp@homasote.com