



SOUND STOP

STOMP™

Acoustical Shielding for Floor Applications

Product Attributes:

- May be used in conjunction with most types of flooring; carpet, wood, laminate, luxury vinyl tile or resilient flooring great than 5 mm thick, and under backer board for ceramic, granite, or porcelain tile
- Made of highly engineered polymer-sound abatement material which has been used in the auto industry for 30+ years
- Minimum of 5 times heavier than other underlayments
- Mold and mildew resistant

Technical Specifications:

- Surface weight: .85 lb. per square foot (85 lb. per roll)
- Roll size: 4' x 25' (100 sq. ft.)
- Thickness: 0.15"
- Product: EVA Fiber
- UL Classified for use in floor-ceiling constructions of all L500 series
- Achieves 1 hour fire resistance floor ratings
- Resistance to Mold Growth, ASTM D3273 and G21, highest resistance of 10, no visible growth
- Low Water Vapor Transmission: <0.50 perms, ASTM E96
- 4 mm Luxury vinyl plank over STOMP on 6" concrete slab: STC= 50, IIC= 55
- 4 mm Luxury vinyl plank over STOMP on 6" concrete slab with a drop ceiling: STC= 60, IIC= 70
- Luxury vinyl tile over STOMP on open web truss: STC= 62, IIC= 55



For further information on STOMP, including data sheet, installation procedures, guide specs, and SDS, visit soundstop.net

CUSTOMER SERVICE EASTERN REGION AND CANADA - 800-233-8721

CUSTOMER SERVICE WESTERN AND SOUTHWESTERN REGION - 800-535-4088

TECHNICAL SUPPORT

800-596-9699 • info@blueridgefiberboard.com • blueridgefiberboard.com



BLUE RIDGE
FIBERBOARD®



SOUND

STOP



STOMP

Application Instructions

FLOORS

Position **STOMP** with polyester fabric side down onto the floor for installation of vinyl or resilient flooring. Position **STOMP** with fabric side up onto the floor for hard surfaces such as laminate or wood flooring. Place edge to edge multiple sheets of **STOMP** to complete the coverage of the room being treated.

Add desired flooring on top of **STOMP** as per recommended installation techniques. Carpet and vinyl layers can go directly on top. Wood floors can be nailed directly on top. Laminate floors can be floated directly on top. For ceramic tile floors, install **STOMP** over the subfloor and under the cement board.

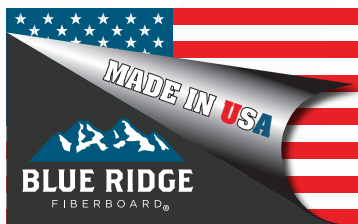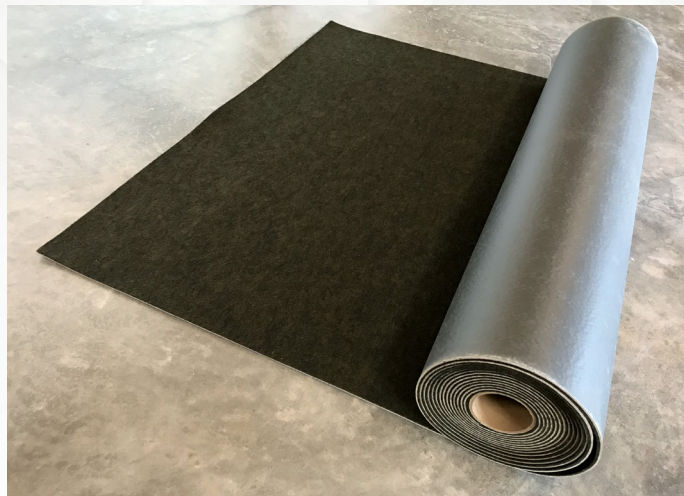

For further information on STOMP, including data sheet, installation procedures, guide specs, and SDS, visit soundstop.net

CUSTOMER SERVICE EASTERN REGION AND CANADA - 800-233-8721

CUSTOMER SERVICE WESTERN AND SOUTHWESTERN REGION - 800-535-4088

TECHNICAL SUPPORT

800-596-9699 • info@blueridgefiberboard.com • blueridgefiberboard.com

