



DELUXE SUPER WIDE OUTSIDE CORNER - TAPE ON

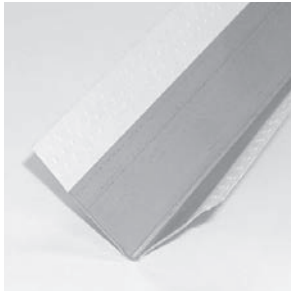


USE: Provides the same extra coverage as P1 Super Wide outside corners and is manufactured with ease and speed of installation in mind.

Length	Pcs/Ctn	Ft/Ctn
7'	50	350
8'	50	400
9'	50	450
10'	50	500

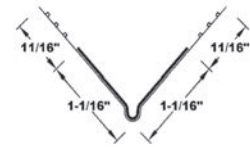


EXTRA WIDE OUTSIDE CORNER - TAPE ON

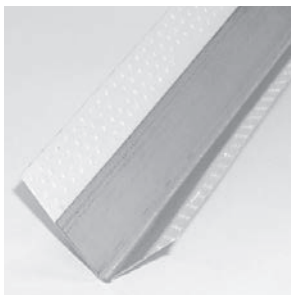


USE: Designed for open angle wall intersections on inside open angle corners.

Length	Pcs/Ctn	Ft/Ctn
7'	50	350
8'	50	400
9'	50	450
10'	50	500

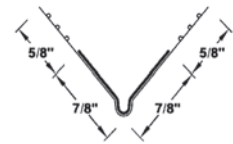


L 1/2" PAPER TRIM

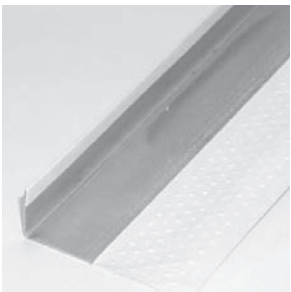

USE: L-shaped 1/2" and 5/8" trim is designed for a clean, professional finish. Best for areas where 1/2" and 5/8" drywall runs adjacent to masonry walls, cinder blocks, drop ceilings, beams, unfinished doorways, or door jams.

Length	Pcs/Ctn	Ft/Ctn
7'	50	350
8'	50	400
9'	50	450
10'	50	500



L 5/8" PAPER TRIM



USE: L-shaped 1/2" and 5/8" trim is designed for a clean, professional finish. Best for areas where 1/2" and 5/8" drywall runs adjacent to masonry walls, cinder blocks, drop ceilings, beams, unfinished doorways, or door jams.

Length	Pcs/Ctn	Ft/Ctn
7'	50	350
8'	50	400
9'	50	450
10'	50	500

